User manal



NAUCON-1000

User manual



Learn about the NAUCON-1000
with this complete User manual

NAUTRONIC
SCOREBOARD SYSTEM

Danmarksvej 1
DK-8660 Skanderborg
www.nautronic.com

Tel.: +45 8651 1166
scoreboards@nautronic.com

NAUCON-1000 USER MANUAL

SETTING UP THE NAUCON-1000

4 Getting to know your NAUCON-1000
5 Indicator icons
6 Start setting up your NAUCON-1000
6 General setup
8 Advanced setup
9 Service menu
14 Board zones setup

SETTING UP SPORT

18-19 Basketball
20-21 Handball
22 Volleyball
23 Ice hockey
24 Tennis
25 Floorball
26 Futsal
27 Bandy
28 Soccer
29 Mini hockey
30 Boxing
31 Water polo
32 American football
33 Basket 3X3
34 Netball
35 Inline hockey
36 Wrestling
37 Interval training
38 Squash/Badminton
38 Baseball


EXTRA SCOREBOARD FEATURES

40 Edit team lineups
41 Correct menu
42 Results showing on an A-H board
42 Side console setup
43 Total reset
44 How to check the software version
45 Updating the NAUCON-1000 software
47 Import/Export settings

TROUBLE SHOOTING

48 Trouble shooting
49 Diagnostics menu
50 Diagnostic troubleshooting guide

Getting to know your NAUCON-1000

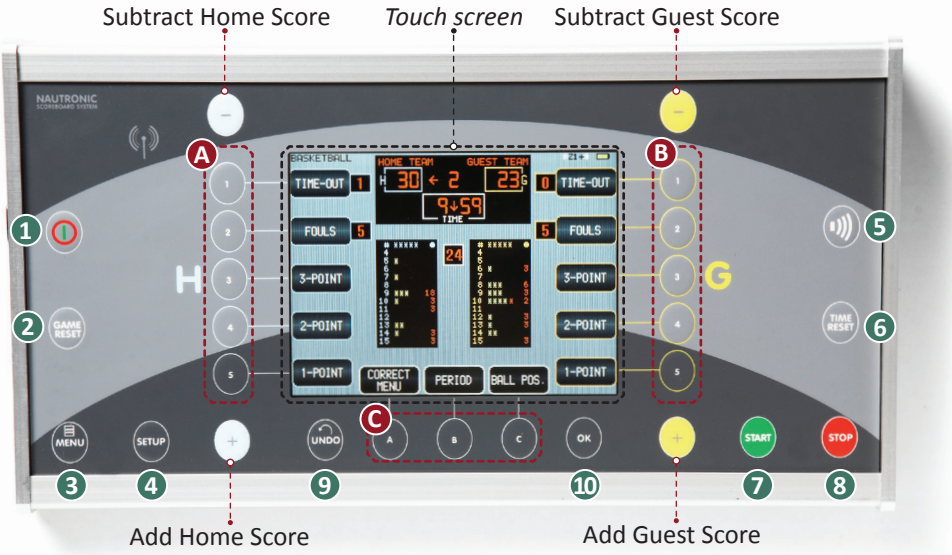

❶ *On/off*
Turn the NAUCON-1000 on and off. When turning off the control panel you must confirm by pressing **ACCEPT** on the touch screen.

❷ *Game reset*
Reset display, you must confirm by pressing **ACCEPT** on the touch screen.

❸ *Menu*
A menu on the touch screen will show *(Fig. 1, page 6)*.

❹ *Setup*
A menu on the touch screen will show.

❺ *Manual horn*
Press to blow the horn.

❻ *Time reset*
Resets time and sets next period time. You must confirm by pressing **ACCEPT** on the touch screen.

❼ *Start*
Game clock starts.

❽ *Stop*
Game clock stops.

❾ *Undo*
Undo the latest change.

❿ *OK*
Confirm any changes made to the setup.

Ⓐ Ⓑ Ⓒ
You can also use the click buttons referring to the buttons on the touch screen.

Wireless communication

H *Home*

G *Guests*

Indicator icons

THE INDICATOR ICONS will show in the top right corner of the touch screen.
Except in the setup menus.




Automatic horn on


Automatic horn off


Battery fully charged


Battery working


Battery charging


Battery low


Battery really low – **charge now!**



Battery critically low – **charge now!**




All zones active



Multiple zones active



All zones disabled



Zone 1-4



COLLISION – another NAUCON-1000 is transmitting in the same zone.
*__Change or disable zones.__ *See more on page 7.*

**Note you might see the flashing collision warning even when all zones are turned off.*

User manal



SETTING UP SPORT

Basketball setup

Choose BASKETBALL from the SELECT SPORT MENU. Then press the **SETUP** click button on the console and you will see a menu like shown below, *Fig. 14a.*



Fig. 14a – Setup basketball menu "Page 1/3"

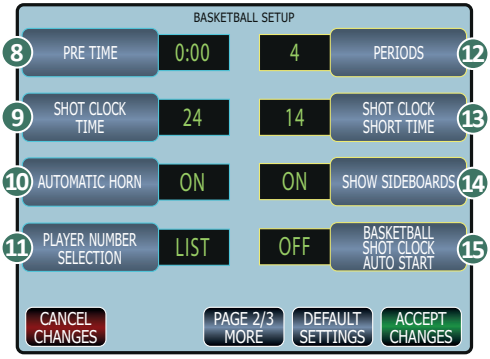


Fig. 14b – Setup basketball menu "Page 2/3"

Fig. 14a – "Page 1/3":

❶ *Edit lineups*
Choose either to edit HOME or GUEST team lineup. You will enter a screen where you can change the name and number of the players, *see page 40.*

❷ *Period time*
Set the length of a period. Default: 10 min.

❸ *Break time*
Set the length of the breaks between periods. Default is 2 minutes.

❹ *Extended break time*
Set the length of an extended break. Default is 2 minutes.

❺ *Extended period time*
Set the length of an extended period. Default is 5 minutes.

❻ *Half-time break time*
Set the length of the half-time break. Default is 15 minutes.

❼ *Count mode*
You can change between whether the game clock is counting up or down by pressing **COUNT MODE**.

Default is DOWN.

Fig. 14b – "Page 2/3":

❽ *Pre time*
Set the length of the pre time / the time counting down before the match. Default is 0 minutes

❾ *Shot clock time*
Set the count down of seconds for the shot clocks. Default is 24 seconds.

❿ *Automatic horn*
You can change between turning the automatic horn ON or OFF. Default is ON.

Basketball setup

⓫ *Player number selection*
Choose whether scores and penalties are given to a specific player or to the whole team. Default is LIST.

LIST: Choose player number from a list.
TYPE: Type player number.
OFF: Scores and penalties are given to the whole team.

⓬ *Periods*
Sets the number of periods in the match. Default is 4.

⓭ *Shot clock short time*
Set the counting length of the shot clock's "Time 2". Default is 14 seconds.

⓮ *Show sideboards*
Turning the sideboards ON or OFF. Default is ON.

⓯ *Basketball shot clock auto start*
ON: Autostarts the shot clock when the game time is started

OFF: Shot clock time is started manually with a remote control.

Default is ON

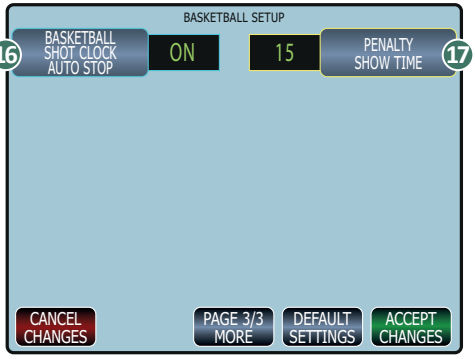


Fig. 14c – Setup basketball menu "Page 3/3"

Fig. 14c – "Page 3/3":

⓰ *Basketball shot clock auto stop*
ON: Stops the shot clock when the game time is stopped.

OFF: Shot clock time will continiue running when the game time is stopped.

Default is ON

⓱ *Penalty show time*
Sets the time that a player number foul is shown on the scoreboard.

Default is 15 sec.